

Maestro active cut supplementary module: cut editor Software for autoamatic sindle balde beam saw

Strictly reserved to the sales network of SCM

September 2019






cut editor



Strictly reserved to the sales network of SCM


Label printing enabling



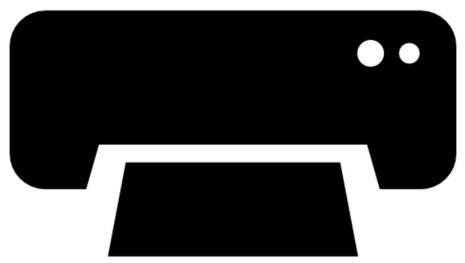



Labels editor 1/2

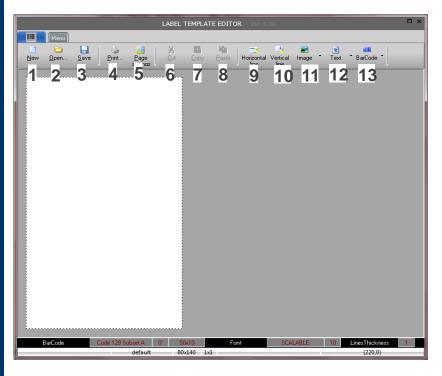

- 1 Display the white sheet used to create the label
- 2 Open a previously saved label
- 3 Save the current label
- 4 Print the current label
- 5 Labels layout management
- 6 Delete selected item
- 7 Copy selected item
- 8 Paste selected item
- 9 Draw horizontal line
- 10 Draw vertical line
- 11 Insert image (use the small narrow on the left to select the origin of the datum to insert)
- 12 Insert text (use the small narrow on the left to select the origin of the datum to insert)
- 13 Insert barcode (use the small narrow on the left to select the origin of the datum to insert



Labels editor 2/2

	LABEL 1	EMPLATE EDITOR - Ver 4.00		□ ×	
Save <u>a</u> s 1		🗐 👘 📄 🔼			
P <u>r</u> inters 2	- F	by <u>P</u> aste Horizontal Ver line lin	ical Image [™] Text ⊪e	* BarCode *	
✓ Snap to grid 3					
General parameters 4					
Zoom 5	•				1 – Save la
✓ Eont Info 6					2 – Always
Redraw 7					3 – Enable
Font 8	•				
Bar-Code 9					4 – Use on
Lines 10		-			5 – Zoom le
					6 – Delete
					7 – Label g 8 – Access insertio 9 – Barcod 10 – Draw 11 – Define
BarCode Cod	de 128 Subset A 0* 50	10 Font	SCALABLE 10	LinesThickness 1	
	default 80>	40 1x1		(1,196)	l i



- bel with another name
- set the Windows pre-set printer
- the virtual grid to position the objects
- ly to change the language of the labels editor
- evel used to display the label
- selected item
- raphic update
- the settings to define the orientation of a text during the n
- e settings
- vertical line
- the default thickness of the lines



Graphic editor



• Writing a new cutting scheme or modifying an existing one through a graphic tool





Panels editor



 Writing a new cutting scheme creating/importing from file the dimensions of the requested panels

(flame-cut management is included)

• External shapes (white) are the ones which can be filled in manually, internal shapes (yellow) are the owner of the scheme (associated to label data or coming from the optimization programme)

Editor Pannelli		¢ 222222222222 •	Lunghezza Larghezza Spessore	Swap
Esterne 💌 😫 🚹		Filtri tagli	Comandi Rifili	
Cerca	Q	6 I P Y	x 🖾 🖸 C x o y	0 Z 0 🗸
2 001 600 450 097 3 0 0 0 007		Considera venatura Oper Rotazione 0 00		Q+ 100% Q- [Q]
+		Aggiungi		E



Semi-automatic macro mode

Smart graphic mode to execute some operations







Thanks for your attention

